

Starter Adapters

New Style Adapter

CURRENT PART NUMBER	OLD (SUPERCEDED) PART NUMBERS							
643147	643165A1	655034						
643152	643165A2	643165A3	655035					
655037	none							
643259-A18	643259A19	643259A30						
643259-A38	643259A14	643259A26	643259A39	646721				
646220-A37	646220-A2	646220-A14						
646220-A43	EQ6642							
646220-A44	none							
646220-A45	none							
646220-A50	none							
646220-A51	none							
646220-A54	none							
653074-A38	641348-A3	641348-A6	641348-A14	653074-A4	653074-A9	653074-A14	653074-A26	653074-A38
653074-A41	641348-A5	641348-A8	641348-A15	653074-A2	653074-A8	653074-A12	653074-A17	653074-A29
653074-A47	653074-A13	653074-A35						